


**PHOTOGRAPHERS**  
**DUNWRIGHT & VOGEL**  
**EQUIPMENT**

The Prowash RC is really simple to set up and use. First, level the surface your washer will be setting on. Don't level the washer by putting shims under the corners, this will rack the washer (especially the larger ones) and make it harder to level all four corners. Instead level the surface the washer will rest on, and set the washer onto this leveled surface.

Make sure the Prowash RC is overhanging the edge of your sink a couple of inches, or you can put the entire washer in the sink. Next, attach one end of the hose to the washer and the other end to your water source. (make sure the rubber washers are seated in the hose connections).

That's about it, turn on the water and run it at a rate of flow that keeps the prints gently separated during the wash. (about 2 liters a minute for the 810, a little more for bigger washers) Follow the manufactures recommend wash time for the paper your using. If you have any questions don't hesitate to call us at 1 800 359 4231.

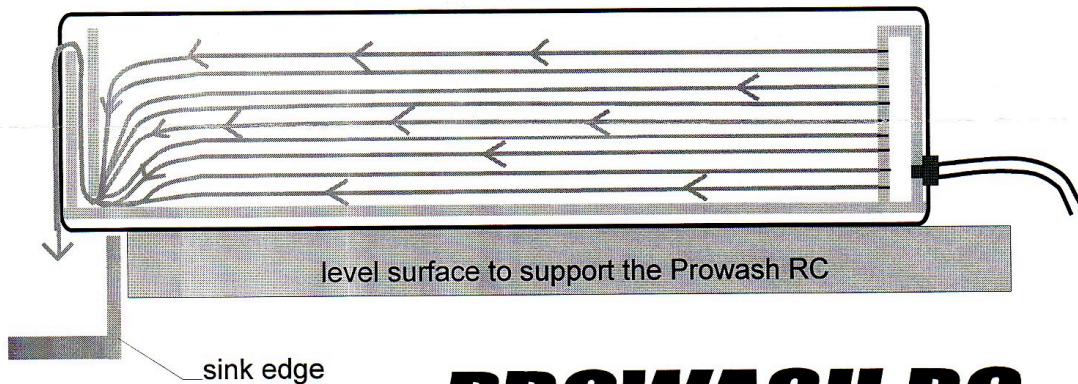

**PROWASH RC**  
RC Print Washer

